


- Stellarator Monitored by CYGNETS

CYGNETS AT THE MAX-PLANCK-INSTITUT FÜR PLASMAPHYSIK

Courtesy of Dr. Christoph Biedermann

In order to monitor the plasma within the Wendelstein 7-X stellarator, the IPP needed cameras capable of fitting into the tight space around the instrument and more importantly to operate reliably close to the large magnetic field necessary for the confinement. The Cygnet was successfully tested up to 1.8 Tesla and the Owl up to 2.3 Teslas. 20 Cygnet cameras in the 10 immersion tubes work and produce images surveying the divertor and the limiter region. Below is a set of the camera images arranged according to the position in the Wendelstein plasma vessel.

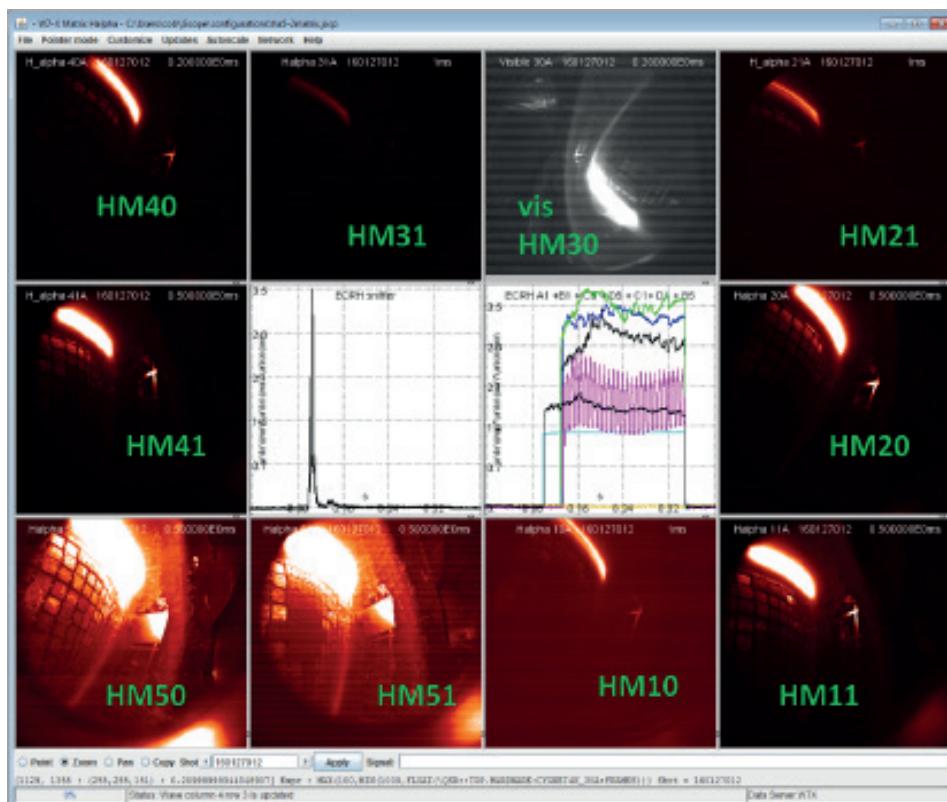

P | APPLICATION NOTE

Stellarator



All the images are taken with Raptor Photonics' Cygnet cameras. The reddish images are taken with an H-alpha (H α) filter at 656nm mounted in front of the sensor. One position has a different objective and no filter (labeled vis HM30). In the middle there are time traces of the microwave radiation showing the absorbed power and the heating of the plasma. The bright light is emitted right at the limiter structure. There the plasma is fairly cold and the hydrogen atoms emit strong H-alpha light. The exposure of the images is different for the various port positions. The images are recorded at the maximum repetition frequency of the camera at 25Hz to catch the development of the plasma and explore the behavior during the discharge.

The CameraLink interface used by the Cygnet allows sustaining the high bandwidth necessary to combine high resolution, speed and dynamic range. Standard 5 meters CameraLink cables allow access to the cameras close to the instrument.

The signal is then converted by a 24 bit fiber adapter and transferred to the control room 100 m away using fiber optics. "The Cygnet is the only camera capable of functioning reliably within the extreme magnetic field generated by the Wendelstein 7-X fusion device. In total, we use 20 cameras to monitor the experiment."

P | APPLICATION NOTE

Stellarator



Figure 1: Cygnet CMOS camera

- + **2.1MP 2/3" OR 4.2MP 1" Scientific CMOS sensor.** Enables optimum image resolution in low light imaging applications.
- + **5.5µm x 5.5µm pixels.** Enables ultra sharp image resolution.
- + **Quantum Efficiency: >63% @ 500nm and >34% @ 850nm.** Optimum Photon collection.
- + **High frame rate: up to 52Hz full Frame.** Enables realtime imaging in full HD format.

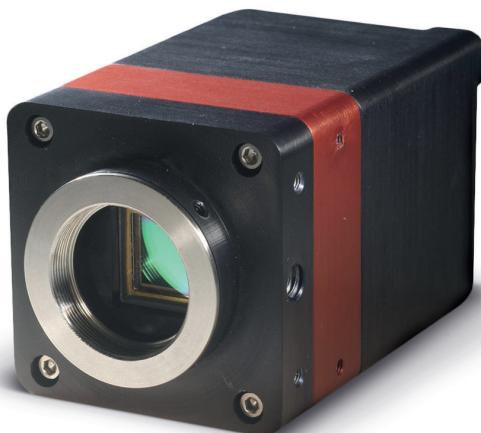


Figure 2: Owl 320 and 640 InGaAS camera

- + **SWIR technology.** Enables high sensitivity imaging from 0.9mm to 1.7mm
- + **High quality sensors, 99% operability,** 320x256 30µm or 640x512 15µm
- + **Optional Visible extension.** Enables high sensitivity imaging from 0.4mm to 1.7mm
- + **14 bit CameraLink output.** Enables high speed digital video with intelligent auto AGC
- + **On-board Automated Gain Control (AGC).** Enables clear video in all light conditions
- + **On-board intelligent 3 point NUC.** Enables highest quality images
- + **And much more!**

• PENLINK



Solid Project Management



Engineering & Product Design



Simulation & Design Verification



Customized Design & Integrated Solutions



Assembly & Testing



Cutting-edge Technology



Value-added Products & Services



Commercial Off The Shelf Products